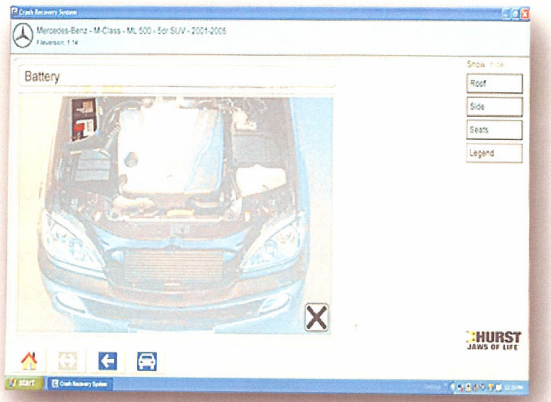
Crash Recovery System
Mercedes-Benz - M-Class - ML 500 - 5dr SUV - 2001-2005
Fileversion: 1.14
Battery
Show hide
Roof
Side
Seats
Legend
HURST
JAWS OF LIFE
start
Crash Recovery System

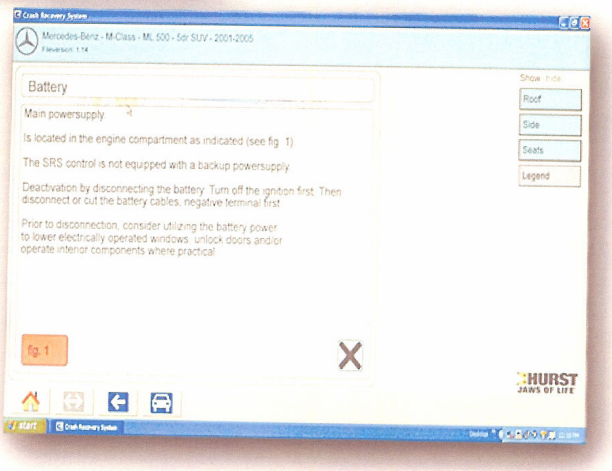
Crash Recovery System
Mercedes-Benz - M-Class - ML 500 - 5dr SUV - 2001-2005
Fileversion: 1.14
Battery
Main powersupply
Is located in the engine compartment as indicated (see fig. 1)
The SRS control is not equipped with a backup powersupply
Deactivation by disconnecting the battery. Turn off the ignition first. Then disconnect or cut the battery cables, negative terminal first.
Prior to disconnection, consider utilizing the battery power to lower electrically operated windows, unlock doors and/or operate interior components where practical.
fig. 1
Show hide
Roof
Side
Seats
Legend
HURST
JAWS OF LIFE
start
Crash Recovery System

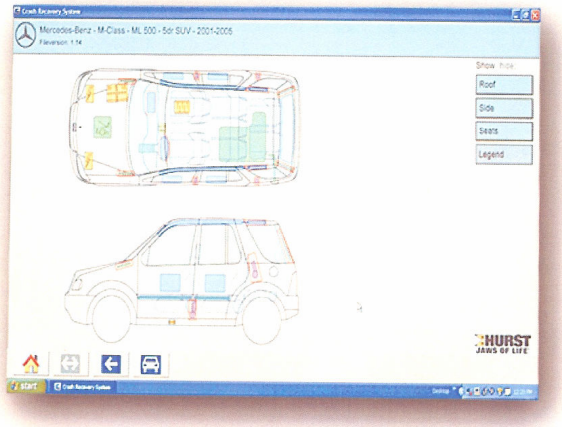
Crash Recovery System
Mercedes-Benz - M-Class - ML 500 - 5dr SUV - 2001-2005
Fileversion: 1.14
Show hide
Roof
Side
Seats
Legend
HURST
JAWS OF LIFE
start
Crash Recovery System